

# HMT101AMC-C

# LCD Module User Manual

Prepared by:	Checked by:	Approved by:	
. roparoa by.	Checked by.	, .pp. 515 d 2).	
LiWenMing			
Livicining			
Date: 2025-01-15	Date:	Date:	

Rev.	Descriptions	Edit	Release Date
0.1	Preliminary release	MaQiYang	2022-05-18
0.2	Update Operating Voltage	Song Mao	2023-03-20
0.3	Update Appendix A	LiWenMing	2025-01-15

Document Name: HMT101AMC-C-Manual-Rev0.3.docx Page: 1 of 14

URL: www.topwaydisplay.com



# **Table of Content**

1.	. Basic Specification	3
	1.1 General Specification	
	1.2 Block Diagram	
	1.3 Terminal Function	
	1.3.1 RS485 Interface Terminal (K1)	
	1.3.2 USB Interface Terminal (K2)	
2.		
3.	•	
-	3.1 DC Characteristics	
4.	. Function Specifications	
	4.1 Basic Operation Function Descriptions	
	4.2 Quick Start Guide	
	4.3 Command Descriptions	
5.		
6.	. LCD Module Design and Handling Precautions	
7.		
8.	<u> </u>	
	Warranty	
Αn	ppendix A	14



### 1. Basic Specification

TOPWAY HMT101AMC-C is a Smart TFT Module with 32bit MCU on board. Its graphics engine provides numbers of outstanding features. It supports TOPWAY SGTools for preload and pre-design display interface that simplify the host operation and development time. Suitable for industry control, instrumentation, medical electronics, power electric equipment applications.

### 1.1 General Specification

Screen Size(Diagonal): 10.1"

Resolution: 1024(RGB) x 600
Color Depth: 65k color (16bit)
Pixel Configuration: RGB Stripe

Display Mode : Transmissive / Normal Black Viewing Direction : 6H (\*1) (gray-scale inverse)

12H (\*2)

Outline Dimension: 251.0 x 145.0 x 21.0 (mm)

(see attached drawing for details)

Active Area: 222.72 x 125.28(mm)

Backlight: LED Command I/F: RS485

Touch Panel Type: Resistive Touch Panel

Project Download: by PC or by U-Drive (with OTG cable)

Operating Temperature :  $-20 \sim +70^{\circ}$ C Storage Temperature :  $-30 \sim +80^{\circ}$ C

Highlight RTC without battery, Support 90 degrees rotation,

Lua script engine, Buzzer

Note:


\*1. For saturated color display content (eg. pure-red, pure-green, pure-blue, or pure-colors-combinations).

\*2. For "color scales" display content.

\*3. Color tone may slightly change by Temperature and Driving Condition.

### 1.2 Block Diagram

URL: www.topwaydisplay.com

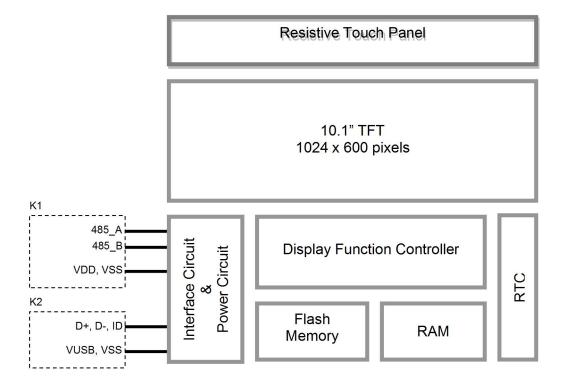

Document Name: HMT101AMC-C-Manual-Rev0.3.docx



### 1.3 Terminal Function

### 1.3.1 RS485 Interface Terminal (K1)

Pin No.	Pin Name	I/O	Descriptions
1,2	VDD	Р	Power supply
3	485_A	I/O	RS485 Differential Signal A
4	NC		No Connection
5,6	485_B	I/O	RS485 Differential Signal B
7,8	VSS	Р	Ground (0V)

Note.

### 1.3.2 USB Interface Terminal (K2)

Pin No.	Pin Name	I/O	Descriptions
1	VUSB	Р	Power supply (5V)
2	D-	I/O	USB DATA negative signal
3	D+	I/O	USB DATA positive signal
4	ID	I/O	USB_ID, 1: Client, 0: HOST
5	VSS	Р	Ground (0V)

Note.

<sup>\*1.</sup> User data and commands transfer through this terminal

<sup>\*1.</sup> TML files and image files preload through this terminal.

<sup>\*2.</sup> Do not connect USB terminal, while VDD(K1) is present.



### 2. Absolute Maximum Ratings

Items	Symbol	Min.	Max.	Unit	Condition
Power Supply voltage	$V_{DD}$	-0.3	28	V	
Operating Temperature	T <sub>OP</sub>	-20	70	°C	No Condensation
Storage Temperature	T <sub>ST</sub>	-30	80	°C	No Condensation

#### Note:

- \*1. This rating applies to all parts of the module and should not be exceeded.
- \*2. The operating temperature only guarantees operation of the circuit. The contrast, response speed, and the other specification related to electro-optical display quality is determined at the room temperature, T<sub>OP</sub>=25°C
- \*3. Ambient temperature when the backlight is lit (reference value)
- \*4. Any Stresses exceeding the Absolute Maximum Ratings may cause substantial damage to the device. Functional operation of this device at other conditions beyond those listed in the specification is not implied and prolonged exposure to extreme conditions may affect device reliability.

### 3. Electrical Characteristics


### 3.1 DC Characteristics

VDD=12V, VSS=0V, T<sub>OP</sub> =25°C

Items	Symbol	MIN.	TYP.	MAX.	Unit	Applicable Pin
Operating Voltage	$V_{DD}$	6.0	12.0	26.0	V	VDD
Differential Driver Output (with load) R=27Ω (*1)	V <sub>OD</sub>	1.5	-	3.3	V	A/B
Receiver Differential Threshold Voltage	V <sub>TH</sub>	-0.2	-	0.2	V	A/B
Operating Current	I <sub>DD</sub>	-	320	-	mA	VDD=12V
Operating Current (USB)	I <sub>VUSB</sub>	-	150	-	mA	VUSB (*3)
Battery Supply Current	I <sub>BAT</sub>	-	0.6	-	uA	

### Notes:

\*1.

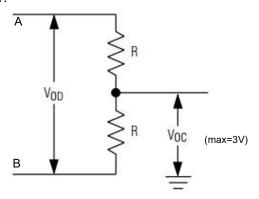


- \*2. Normal display condition
- \*3. USB-drive (high-speed)

URL: www.topwaydisplay.com



### 4. Function Specifications

### 4.1 Basic Operation Function Descriptions

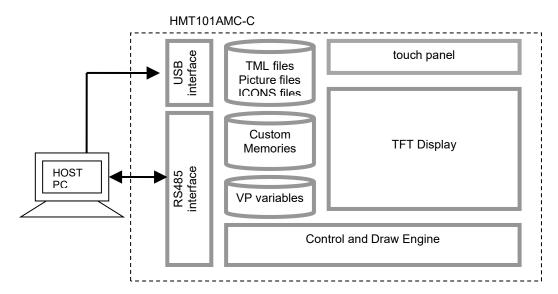

- TML files, images, icons are stored inside the flash memory area. They are pre-loaded into the HMT101AMC-C via USB.
- The GUI's appearance and responses are based on the preloaded TML files
- The Control- and Drawing- Engine executes RS485 / Modbus RTU commands.



### 4.2 Quick Start Guide

1. Install TOPWAY Graphics Editor



Import pictures 2. design UI flow



3. Download to Smart LCD



4. power on & d isplay



5. Connect to host Show real time data



### 4.3 Command Descriptions

The HMT101AMC-C needs to add the configuration file "modbus.xml" to the project generated by the TOPWAY SGTools to describe the relationship between the screen variables and the registers of the Modbus Slave device.

Please refer to Appendix A for "Modbus.xml" formating.



# 5. Optical Characteristics

Item		Symbol	Condition	Min	Тур	Max	Unit	Remark
		θТ		65	75	-		
View Angles		θВ	CR≧10	70	80	-	Degree	Note2,3
		θL		70	80	-		
		θR		70	80	-		
Contrast Ratio		CR	θ <b>=0</b> °	600	800	-		Note 3
Response Time		Ton	<b>25</b> ℃		7	10	ms	Note 4
rtooponoo riino	polise Time		250	-	9	18	1110	14010 4
	White	х	Backlight is on	0.241	0.281	0321		Note 1,5
		у		0.260	0.300	0.340		,-
	Red	х		0.518	0.558	0.598		Note 1,5
Chromaticity		у		0.288	0.328	0.368		
	Green	х		0.276	0.316	0.356		
		у		0.522	0.562	0.602		
	Blue	х		0.115	0.155	0.195		Note 1,5
		у		0.074	0.114	0.154		,-
Uniformity		U		70	80	-	%	Note 6
NTSC				40	50	-	%	Note 5
Luminance		L		-	300	-	cd/m²	Note 7

URL: www.topwaydisplay.com

2. The test systems refer to Note 1 and Note 2.



#### Note 1:


The data are measured after LEDs are turned on for 5 minutes. LCM displays full white. The brightness is the average value of 9 measured spots. Measurement equipment SR-3A (1°)

Measuring condition:

- Measuring surroundings: Dark room
- Measuring temperature: Ta=25℃.
- Adjust operating voltage to get optimum contrast at the center of the display.

The definition of viewing angle:

Refer to the graph below marked by  $\theta$  and  $\Phi$ 

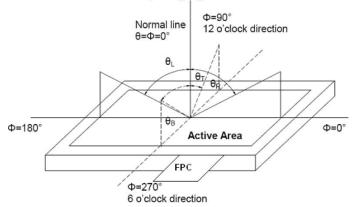

Note 3:

The definition of contrast ratio (Test LCM using SR-3A (1°)):

Luminance When LCD is at "White' Contrast state

Luminance When LCD is at "Black" Ratio(CR)

state

(Contrast Ratio is measured in optimum common electrode voltage)

Note 4:

Definition of Response time. (Test LCD using BM-7A(2°)):

The output signals of photo detector are measured


when the input signals are changed from

"black" to "white"(falling time)

and from "white" to "black" (rising time), respectively.

The response time is defined as


the time interval between the 10% and 90% of amplitudes. Refer to figure as below.

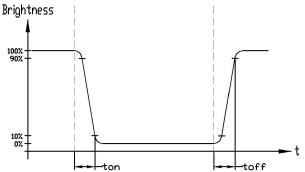

Note 5:

Definition of Color of CIE1931 Coordinate and NTSC Ratio.

Color gamut:

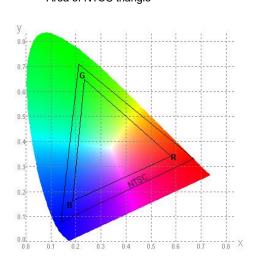


Note 6:

The luminance uniformity is calculated by using following formula.  $\triangle$ Bp = Bp (Min.) / Bp (Max.)×100 (%)

Bp (Max.) = Maximum brightness in 9 measured spots

Bp (Min.) = Minimum brightness in 9 measured spots.

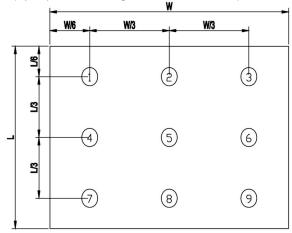

Measured the luminance of white state at center point

### 6. LCD Module Design and Handling **Precautions**

- Please ensure V0, VCOM is adjustable, to enable LCD module get the best contrast ratio under different temperatures, view angles and positions.
- Normally display quality should be judged under the best contrast ratio within viewable area. Unexpected display pattern may com out under abnormal contrast ratio.
- Never operate the LCD module exceed the absolute maximum ratings.
- Never apply signal to the LCD module without power supply.
- Keep signal line as short as possible to reduce external noise interference.
- IC chip (e.g. TAB or COG) is sensitive to light. Strong light might cause malfunction. Light sealing structure casing is recommended.
- Make sure there is enough space (with cushion) between case and LCD panel, to prevent external force passed on to the panel; otherwise that may cause damage to the LCD and degrade its display result.
- Avoid showing a display pattern on screen for a long time (continuous ON segment).
- LCD module reliability may be reduced by temperature shock.
- When storing and operating LCD module, avoids exposure to direct sunlight, high humidity, high or low temperature. They may damage or degrade the LCD
- -Never leave LCD module in extreme condition (max./min storage/operate temperature) for more than 48hr.
- Recommend LCD module storage conditions is 0 C~40 C <80%RH.
- LCD module should be stored in the room without acid, alkali and harmful gas.
- Avoid dropping & violent shocking during transportation, and no excessive pressure press, moisture and sunlight.
- LCD module can be easily damaged by static electricity. Please maintain an optimum anti-static working environment to protect the LCD module. (eg. ground the soldering irons properly)
- Be sure to ground the body when handling LCD module.
- Only hold LCD module by its sides. Never hold LCD module by applying force on the heat seal or TAB.
- When soldering, control the temperature and duration avoid damaging the backlight guide or diffuser which might degrade the display result such as
- Never let LCD module contact with corrosive liquids, which might cause damage to the backlight guide or the electric circuit of LCD module.
- Only clean LCD with a soft dry cloth, Isopropyl Alcohol or Ethyl Alcohol. Other solvents (e.g. water) may damage the LCD.
- Never add force to components of LCD module. It may cause invisible damage or degrade the module's reliability.
- When mounting LCD module, please make sure it is free from twisting, warping and bending.
- Do not add excessive force on surface of LCD, which may cause the display color change abnormally.
- LCD panel is made with glass. Any mechanical shock (e.g. dropping from high place) will damage the LCD module.

URI:

www.topwaydisplay.com

### 6. 液晶显示模块设计和使用须知

- 请注意 VO, VCOM 的设定, 以确保液晶显示 模块在不同的使用温度下以及在不同的视角 和位置观察模块显示,均能达到最佳对比 度,请务必将应用电路上设置为对比度可 调。
- 请注意液晶显示模块的显示品质判定是指在 正常对比度下以及视窗(V.A)范围内进行的, 非正常对比度下液晶可能会出现非预期的显 示不良,应注意区分。
- 请勿在最大额定值以外使用液晶显示模块。
- 请勿在没有接通电源的条件下,给液晶显示 模块输送信号。
- 请尽可能缩短信号线的连接,以避免对液晶 显示模块的信号干扰。
- 集成电路因 IC 芯片(如 TAB 或 COG)对紫外线 极为敏感,强光环境下可能会引起液晶显示 模块功能失效,故应采用不透光的外壳。
- 请在液晶显示模块与外壳之间保留足够的空 间(可使用衬垫),以缓冲外力对液晶显示模 块的损坏或因受力不均而产生的显示不匀等 异常现象。
- 避免液晶显示屏在某一画面下长时间点亮, 否则有出现残影的风险;请通过软件每隔一 段时间改变一次画面。
- 液晶显示模块的可靠性可能因温度冲击而降
- 请勿在阳光直射、高湿、高温或低温下储存 和使用液晶显示模块, 这将造成液晶显示模 块的损坏或失效。
- 请勿在极限环境(最大/最小存储/工作温度) 下使用或放置液晶显示模块超过 48 小时以 上。
- 液晶显示模块建议存储条件为: 0 C~40 C <80%RH。
- 请勿让液晶显示模块存储于带有 酸性,碱 性,有害气体环境之中。
- 在运输过程中, 请勿让液晶显示模块跌落与 猛烈震动, 同时避免 异常挤压, 高湿度, 与 阳光照射.
- 液晶显示模块极易受静电损坏, 请务必保证 液晶显示模块在防静电的工作环境中使用或 保存。(如:烙铁正确接地,等)
- 拿取液晶显示模块时需注意操作人员的接地
- 请手持液晶显示模块的边沿取放模块, 防止 热压纸或 TAB 部位受力。
- 焊接液晶模块时,请注意控制烙铁的温度、 焊接时间,以免烫坏导光板或偏光片,导致 显示不匀等不良现象发生。
- 请勿使用洗板水等腐蚀性液体接触液晶模 块,以免腐蚀导光板或模块电路。
- 仅可使用柔软的干布, 异丙醇或乙醇清洁液

Document Name: HMT101AMC-C-Manual-Rev0.3.docx

- Protective film is attached on LCD screen. Be careful when peeling off this
  protective film, since static electricity may be generated.
- Polarizer on LCD gets scratched easily. If possible, do not remove LCD protective film until the last step of installation.
- When peeling off protective film from LCD, static charge may cause abnormal display pattern. The symptom is normal, and it will turn back to normal in a short while.
- LCD panel has sharp edges, please handle with care.
- Never attempt to disassemble or rework LCD module.
- If display panel is damaged and liquid crystal substance leaks out, be sure not to get any in your mouth, if the substance comes into contact with your skin or clothes promptly wash it off using soap and water.

### 7. CTP Mounting Instructions

### 7.1 Bezel Mounting (Figure 1)


- The bezel window should be bigger than the CTP active area. It should be ≥
   0.5mm each side.
- Gasket should be installed between the bezel and the CTP surface.
   The final gap should be about 0.5~1.0mm.
- It is recommended to provide an additional support bracket for backside support when necessary (e.g. slim type TFT module without mounding structure). They should only provide appropriate support and keep the module in place.
- The mounting structure should be strong enough to prevent external uneven force or twist act onto the module.

- 晶屏表面,其他任何溶剂(如:水)都有可能损 坏液晶模块。
- 请勿挤压液晶显示模块上的元器件,以避免 产生潜在的损坏或失效而影响产品可靠性。
- 装配液晶显示模块时,请务必注意避免液晶显示模块的扭曲或变形。
- 请勿挤压液晶显示屏表面,这将导致显示颜 色的异常。
- 液晶屏由玻璃制作而成,任何机械碰撞(如从 高处跌落)均有可能损坏液晶显示模块。
- 液晶屏表面带有保护膜,揭除保护膜时需要 注意可能产生的静电。
- 因液晶显示屏表面的偏光片极易划伤,安装 完成之前请尽量不要揭下保护膜。
- 请缓慢揭除保护膜,在此过程中液晶显示屏 上可能会产生静电线,此为正常情况,可在 短时间内消失。
- · 请注意避免被液晶显示屏的边缘割伤。
- 请不要试图拆卸或改造液晶显示模块。
- 当液晶显示屏出现破裂,内部液晶液体可能流出;相关液体不可吞吃,绝对不可接触嘴巴,如接触到皮肤或衣服,请使用肥皂与清水彻底清洗.

### 7. 电容触摸屏安装指导

#### 7.1 面框安装 (附图 1)

- 客户面框窗口应大于 CTP 动作区域,各边离动作区应≥0.5mm.
- 面框与 CTP 面板间应垫有胶垫, 其最终间隙 约为 0.5~1.0mm.
- 建议必要时在背面提供附加支架(例如无安装结构的薄型 TFT 模块),应仅利用适当支撑以保持模块位置.
- 安装结构应具有足够的强度,以防止外部不均匀力或扭曲力作用到模块上.

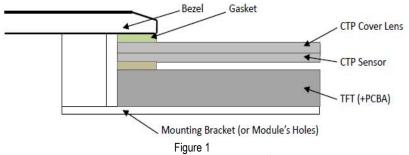

#### 7.2 Surface Mounting (Figure 2)

- As the CTP assembling on the countersink area with double side adhesive.
   The countersink area should be flat and clean to ensure the double side adhesive installation result.
- The Bezel is recommend to keep a gap (≥0.3mm each side) around the cover lens for tolerance.
- It is recommended to provide an additional support bracket with gasket for backside support when necessary (e.g. TFT module without mounding structure). They should only provide appropriate support and keep the module in place.

#### 7.2 嵌入安装 (附图 2)

- 客户面框应具有使用双面胶粘贴 CTP 的结构 沉台面,其粘贴面要求平整且洁净无污以保 证粘贴牢靠.
- 考虑到制作误差,建议面框与 CTP 盖板之间 四周留有≥0.3mm 间隙.
- 建议必要时在背面提供垫有胶垫附加支架(例如无安装结构的 TFT 模块),应仅利用适当支

Document Name: HMT101AMC-C-Manual-Rev0.3.docx


Page: 11 of 14



The mounting structure should be strong enough to prevent external uneven force or twist act onto the module

撑以保持模块位置.

安装结构应具有足够的强度, 以防止外部不 均匀力或扭曲力作用到模块上。

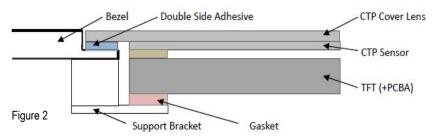


#### 7.3 Additional Cover Lens Mounting (Figure 3)

- For the case of additional cover Lens mounting, it is necessary to recheck with the CTP specification about the material and thickness to ensure the functionality.
- It should keep a 0.2~0.3mm gap between the cover lens and the CTP surface..
- The cover lens window should be bigger than the active area of the CTP.It should be ≥0.5mm each side.
- It is recommended to provide an additional support bracket for backside support when necessary (e.g. slim type TFT module without mounding structure). They should only provide appropriate support and keep the module
- The mounting structure should be strong enough to prevent external uneven force or twist act onto the module.

#### 7.3 覆加盖板 (附图 3)

- 需要覆加玻璃盖板的安装,为确保其功能, 有必要查看产品规格书中有关盖板材料和厚 度的说明.
- 玻璃盖板与 CTP 表面之间应留有 0.2~0.3mm 间隙.
- 玻璃盖板视窗应大于 CTP 动作区域, 各边离 动作区应≥0.5mm。
- 建议必要时在背面提供附加支架(例如无安装 结构的薄型 TFT 模块),应仅利用适当支撑以 保持模块位置.
- 安装结构应具有足够的强度, 以防止外部不 均匀力或扭曲力作用到模块上.

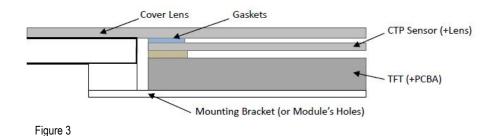

# 8. RTP Mounting Instructions

URI:

www.topwaydisplay.com


- It should bezel touching the RTP Active Area (A.A.) to prevent abnormal touch.lt should left gab D=0.2~0.3mm in between. (Figure 4)
- Outer bezel design should take care about the area outside the A.A. Those areas contain circuit wires which is having different thickness. Touching those areas could de-form the ITO film. As a result bezel the ITO film be damaged and shorten its lifetime.
  - It is suggested to protect those areas with gasket (between the bezel and RTP). The suggested figures are B≥0.50mm; C≥0.50mm. (Figure 4)
- The bezel side wall should keep space E= 0.2 ~ 0.3mm from the RTP. (Figure 4)

### 8. 电阻触摸屏安装指导

- 为避免面框直接压在动作区(A. A.)上造成误 动作,面框与电阻触摸屏(RTP)之间应留有一 定的空隙  $D=0.2^{\circ}0.3mm$  之间. (附图 4)
- 设计面框时,要注意用面框保护触摸屏四周 的非保证操作区域, 因为布线区域在此处形 成一台阶,在此区域附近操作时 ITO Film 变 形较大,容易导致 ITO 损坏而降低寿命。为 保护 RTP 和避免误操作,在 RTP 与面框之间 垫缓冲物(Gasket),我们建议设计面框应 覆盖动作区的边缘,面框边缘到 V. A. 区的距 离 B≥0.50mm; 垫圈内边缘到 V.A.区的距离 C≥0.50mm. (附图 4)
- 在设计面框与 RTP 组装时,应考虑到面框内 侧与 RTP 外侧的间距 E≥0.2mm. (附图 4)


Document Name: HMT101AMC-C-Manual-Rev0.3.docx

Page: 12 of 14

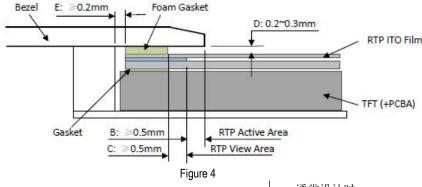

In general design, RTP V.A. should be bigger than the TFT V.A. and RTP A.A. should be bigger than the TFT A.A. (Figure 5)

通常设计时: RTP 的可视区 V.A. 应不小于 TFT 的可视区 及 RTP 的动作区 A. A. 应不小于 TFT 的动作 ☒ A.A. (附图 5)

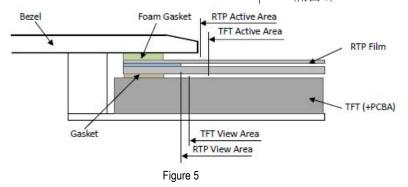

### Warranty

URL: www.topwaydisplay.com

This product has been manufactured to our company's specifications as a part for use in your company's general electronic products. It is guaranteed to perform according to delivery specifications. For any other use apart from general electronic equipment, we cannot take responsibility if the product is used in medical devices, nuclear power control equipment, aerospace equipment, fire and security systems, or any other applications in which there is a direct risk to human life and where extremely high levels of reliability are required. If the product is to be used in any of the above applications, we will need to enter into a separate product liability agreement.

- We cannot accept responsibility for any defect, which may arise form additional manufacturing of the product (including disassembly and reassembly), after product delivery.
- We cannot accept responsibility for any defect, which may arise after the application of strong external force to the product.
- We cannot accept responsibility for any defect, which may arise due to the application of static electricity after the product has passed our company's acceptance inspection procedures.
- When the product is in CCFL models, CCFL service life and brightness will vary according to the performance of the inverter used, leaks, etc. We cannot accept responsibility for product performance, reliability, or defect, which may arise.
- We cannot accept responsibility for intellectual property of a third part, which may arise through the application of our product to our assembly with exception to those issues relating directly to the structure or method of manufacturing of our product.

Document Name: HMT101AMC-C-Manual-Rev0.3.docx

Page: 13 of 14



### Appendix A

### Modbus RTU Master Xml configure v1.01

modbus.xml (example)

```
<Modbus>
 <config>
  <relative vpaddr="0x080000" vplen="1" slaveID="1" mbaddr="0x40000" mblen="1"/>
  <relative vpaddr="0x080002" vplen="1" slaveID="1" mbaddr="0x40001" mblen="1"/>
  <relative vpaddr="0x080004" vplen="1" slaveID="1" mbaddr="0x40002" mblen="1"/>
<relative vpaddr="0x020000" vplen="1" slaveID="1" mbaddr="0x40008" mblen="2"/>
  <relative vpaddr="0x080034" vplen="1" slaveID="1" mbaddr="0x4000A" mblen="1"/>
 </config>
 <global>
  <Read condition = "always" vpaddr_condition="0x080004" value_condition="100"</pre>
  slaveID="1" mbaddr ="0x40008" mblen= "2" />
  <BLCtrl condition = "==" vpaddr condition="0x080004" value condition="100"</pre>
  value type="const" vpaddr val ="64" />
  <BeepCtrl condition = "==" vpaddr condition="0x080004" value condition="100"</pre>
 value type="variable" vpaddr val ="0x80034" />
 </global>
 <Page PageNo="1">
  <Read condition = "always" vpaddr_condition="0x080004" value_condition="100"</pre>
  slaveID="1" mbaddr ="0x40000" mblen= "3" />
 </Page>
```

#### Root element:

Element	Functions	Details
<modbus></modbus>	Root element	Contain child elements
		<config>, <global> &amp; <page pageno="n"></page></global></config>
<config></config>	Child element	Define the relation between VP address and MODBUS address.
	for address mapping	When a mapped VP address being updated by the screen operation, its value will update (send to) the MODBUS slave address accordingly.
		subchild: relative
<global></global>	Child element for global	Define periodical operation that carryout continuously.
	periodical operations	subchild: Read, Write, BLCtrl, BeepCtrl
< Page PageNo=n>	Child element	Define periodical operation that carryout continuously while "PageNo
	for periodical operations while	=n" is show on screen
	"PageNo=n" is show on screen	subchild: Read, Write, BLCtrl, BeepCtrl

#### Parameters:

vpaddr:	VP address of the SmartLCD (*1)	condition: "always", ">", ">=", "<", "<=", "==, "!="
vplen:	VP data length	vpaddr_condition: condition variable VP address
slaveID:	MODBUS slave device id	value_condition: condition value
mbaddr:	MODBUS slave data address (*2)	value_type: "const", "variable"
mblen:	MODBUS data length	

### Note:

\*1. MODBUS slave data address

0x coil: address 0x00000~0x0270F; 1x input: address 0x10000~0x1270F

3x input Register: address 0x30000~0x3270F; 4x holding Register: address 0x40000~0x4270F

\*2. SmartLCD VP address

0x80000: 16bit variable, it can map with one MODBUS 16bit address (3x or 4x) or map with sixteen MODBUS bit address (0x or 1x) 0x20000: 32bit variable, it can map with two MODBUS 16bit address (3x or 4x) or map with thirty-two MODBUS bit address (0x or 1x) 0x30000: 64bit variable, it can map with four MODBUS 16bit address (3x or 4x) or map with sixty-four MODBUS bit address (0x or 1x)

\*3. VP value mapping to MODBUS bit address (0x or 1x) details

16bit VP value bit:	b15(MSB)	 b8	b7		b0(LSB)
0x coil address:	0x0000F	 0x00008	0x00007		0x00000
1x input address:	0x1000F	 0x10008	0x10007	•••	0x10000

URL: <a href="https://www.topwaydisplay.com">www.topwaydisplay.com</a>
Document Name: HMT101AMC-C-Manual-Rev0.3.docx
Page: 14 of 14

